




## CABANA S TENT ERECTION MANUAL & MAINTENANCE GUIDE

Your step by step instructions to help you erect the Cabana S tent for your Sprite caravan.

All tent poles are colour coded as follows:

Y	Yellow
O	Orange
BL	Blue
BK	Black
W	White

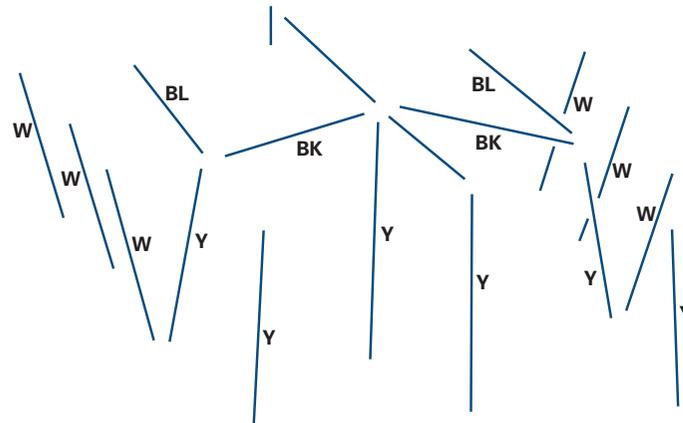

### TAKE NOTE

1. Please read information on the back page, giving you some useful tips on how to care for your tent.
2. Erect the tent with zip-out front & side walls removed - it is easier to handle.
3. Put a double twist in the rubber rings when pegging down the walls - it increases their strength & improves tension.





1. Spread groundsheet out on the side of the caravan. Lay poles & corner fittings out on the ground (make sure you have the colour-coding correct).




2. Insert draftskirt into the extrusion & velcro attach to corner gussets. Slide the magazine pocket into the extrusion above the wheel arch.



3. Insert the right & left side poles into sockets on caravan side. Open up the tent, zip out the walls, then introduce the bolt rope into the tent extrusion.



13. Extend the verandah by inserting the ridge pole & the centre upright. Place the guy rope & peg securely.

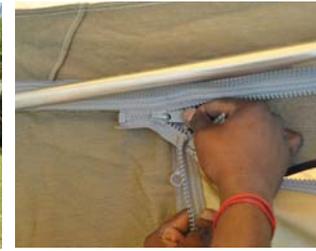

14. Zip on the side walls, close all plastic window zips & adjust poles for maximum canvas tension.



15. Secure the weather strip in place & peg the guy ropes front & back.



4. Open up the tent. Pull the tent across the caravan while someone helps you by feeding bolt rope into the extrusion.



5. Introduce the corner gusset bolt rope into the vertical extrusion & pull down on each side.



6. Ensure the reinforcing strip in the tent roof is aligned with the centre socket on the caravan & that the sidewall zip is the same height from the floor, at the front & rear of the caravan.



16. Pull out window awnings, insert window awning poles, attach guy ropes & pegs.



17. Tighten up, check & secure your now fully erected tent.



7. By going inside the collapsed tent, lift the roof by inserting the short centre pole into the central bracket.



8. Raise the centre ridge pole & connect to the centre upright, using the 5 way connector.



9. Adjust to a semi-raised position & twist bottom pole to lock into position.



10. Assemble inner apex poles & pass these through the sleeves in the tent.



11. Connect both apex poles to centre upright.



12. Connect apex poles to side poles & connect uprights.

## ACCESSORIES



PATIO



PATIO S/WALL



PATIO F/WALL



MULTI-ROOM

**NOTE:** Secure all locking tapes on poles. Peg down all front & side walls. It is important that the tent is pegged square to the caravan. Peg down storm guy ropes & tension.

## HOW TO CARE FOR YOUR TENT

### MAINTENANCE

Jurgens Ci Caravan's side tents do need preventative maintenance. The following should be borne in mind:

The most frequent cause of cloth breakdown is diamond spot mildew. This is a fungal growth, which should be avoided in order to prolong the life of the tent. This may be done by keeping the tent clean. The best way in which to maintain a high level of cleanliness is through regular brushing with a firm, but not harsh brush. A clothes brush is ideal. Avoid detergents on the roof canvas, as this will effect the waterproofing properties.

The tent sidewalls are manufactured from acrylic canvas and have been treated with Scotch guard Fabric Protector to resist water and dirt.

Make quite certain that the tent is completely dry before it is repacked into its storage bag, otherwise mildew will form. As with clothing or any other garment, it is necessary to store the article in a condition in dry surroundings.

Should you find it necessary to dismantle your tent while it is wet, don't fold it tightly, but bundle it together loosely and allow it to dry at the first opportunity.

Never throw your tent in its bag into the back of your storeroom when you return from your holiday. Rather, make sure the tent is quite dry. Fold it with the zips open, then pack it into the bag provided.

Never store your tent and bag on a concrete floor as this encourages condensation and moisture. Rather store on a shelf or raised platform with good ventilation.

If a long storage period is likely, open the tent to air it at about 3 month intervals. Always carry silicone proofer which can be obtained in easy-to-apply aerosol cans from any Jurgens Ci dealer.

### STORM DAMAGE

It is important to appreciate that the effects of storm damage are not covered by the terms of your side tent warranty. The importance of correct pegging down and tensioning cannot be overemphasized.

Should very windy conditions be anticipated, make use of additional guy ropes to overcome the effects of wind. By rolling up the plastic windows, strong wind pressure can be relieved.

The spring loaded anchor pegs and rubber tension rings normally allow for the slight shrinkage of the tent when it gets wet. However, should roof tension appear to be excessive, simply slack off the ridgepole length adjusters very slightly.

**NOTE:** A sloppily erected or slack tent is most susceptible to wind damage.

### SIDE TENT ZIPS

Zips are used on doorways, window flaps and in some instances, to allow full panels to be removed to provide both better ventilation and also to reduce mass while erecting, or to fit accessories. The zips should cause little trouble if handled correctly. When folding and packing, the zips should be closed to avoid over straining during subsequent operations. The operation most likely to cause zip failure is sharp kinking, so be careful not to stand on zips when handling the tent. A light wipe along the teeth with a candle will help lubrication, and allow the zip slider to operate smoothly. It will be found that the slight wax deposit will help in preventing any water from seeping through the zip teeth apertures. Never force a zip. If the slider does not engage without excessive efforts, something must be wrong. It will be found that either the fee-in on an open-ended zip has not been properly aligned, or that there is excessive cross-pull on the zip. This could be due to over tight pegging. Do not force the zip-simply adjust the incorrectly loaded peg.

### MULTI ROOM FACILITY

As an optional extra, canvas Multi-Rooms may be installed in the openings provided by the removal of the tent's loose sidewalls.

### MUD FLAPS

Unsupported PVC is used as a mud flap to keep the lower edge of the tent wall clear of the ground to prevent unnecessary dirtying and mildew breakdown. It should not be used under tension if properly used, as the full tension of pegging the tent wall down is taken through the rubber rings fix to the canvas. The mud flap can be tucked slackly under the side poles without ill effect, but will probably tear at the stitch line if unduly stressed by pulling.

### TENT AND BAG CARE

Avoid damage: never drag your tent and bag over rough surfaces. The tent should be carried to the point where it is to be erected. Never place the tent or a bag on to a contaminated surface. Unfold your tent on to your ground sheet wherever possible. Avoid walking about on a tent panel lying flat, as this could cause any sharp object beneath to penetrate the tent fabric.